



14+ AGES

VORTEX

2.4G RC HIGH SPEED RACING BOAT

FTX0700



ATTENTION: Please read all the warnings and instructions carefully before using this product.


NOTICE: It is normal for some water to find it's way into the boat during use, all the inner parts are waterproof and this will not effect performance. You only need to open the water outlet to pour out the water after each use.

NOTES ON BATTERY USE:

- Always allow the battery cool after use, before recharging.
- Always inspect the battery before charging.
- Any bare wires, split heat shrink or leakage is a sure sign of abuse.
- Never attempt to charge dead or damaged batteries.
- Do not disassemble the battery or cut the connector wires.
- If the battery connector gets hot enough to melt there is most likely a serious problem with your model, driveline, battery wires or speed controller. Find and correct the problem before installing another charged battery pack.
- NEVER charge the battery unattended incase of overcharging, you need to be able to monitor the battery during charging.
- Charge away from flammable objects and on a non-flammable surface incase the battery becomes too hot.

FTX IS AN EXCLUSIVE BRAND OF CML DISTRIBUTION
SAXON HOUSE, SAXON BUSINESS PARK, HANBURY ROAD, BROMSGROVE,
WORCESTERSHIRE, B60 4AD ENGLAND.
EMAIL: INFO@FTX-RC.COM WEB: WWW.FTX-RC.COM


Main Structures of RC Boat

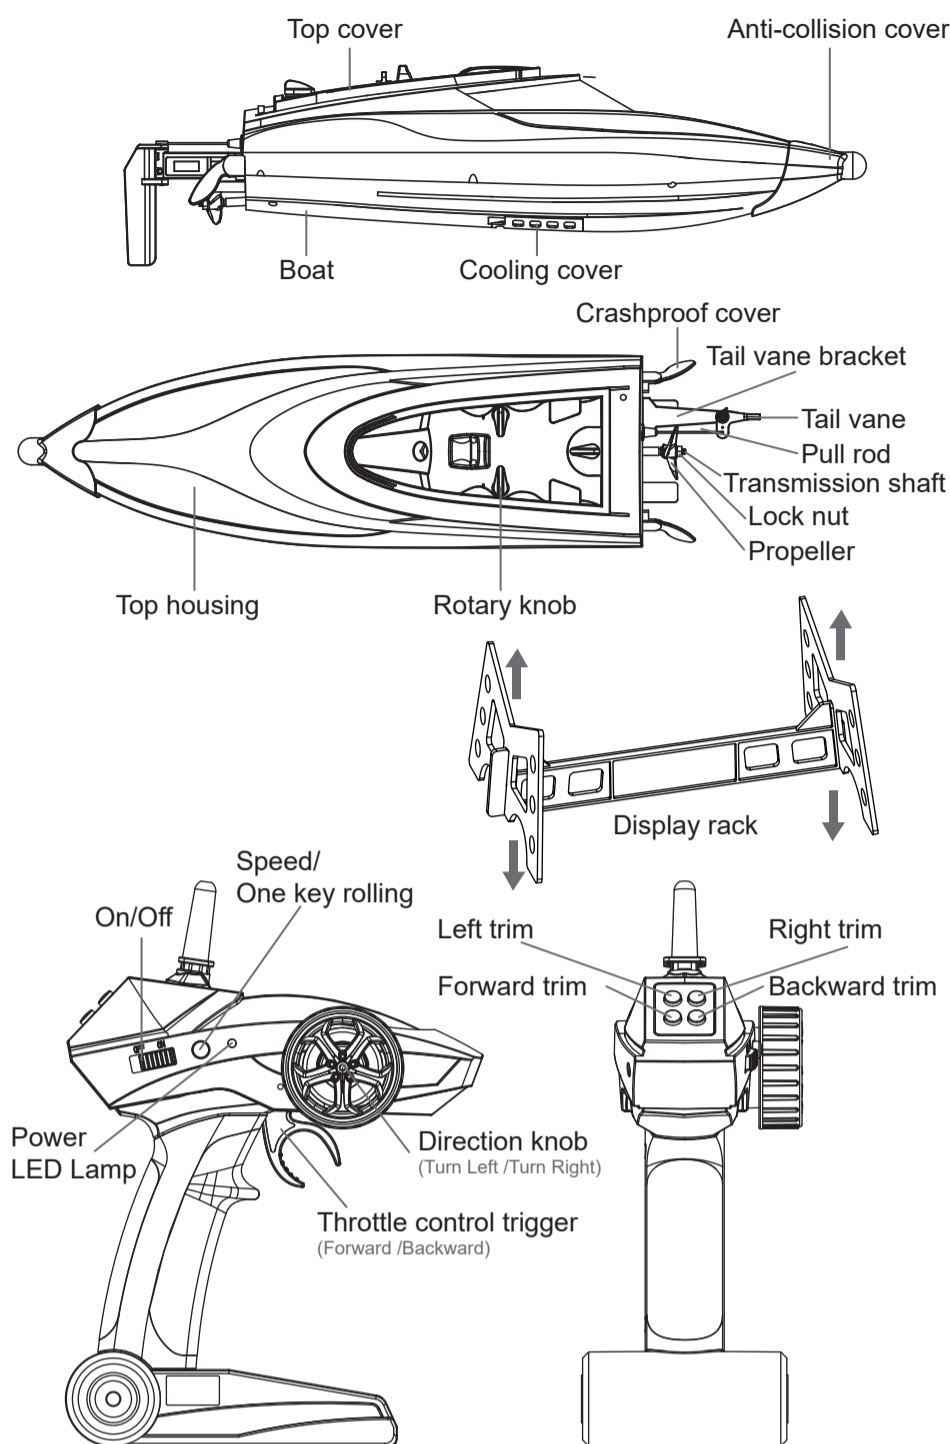

-1-

Methods for Installing Batteries of Remote Controller

Open the battery cover of the remote controller; insert 4 X 1.5 V AA batteries into the battery case according to positive and negative electrodes, close the battery cover.(Batteries not included)

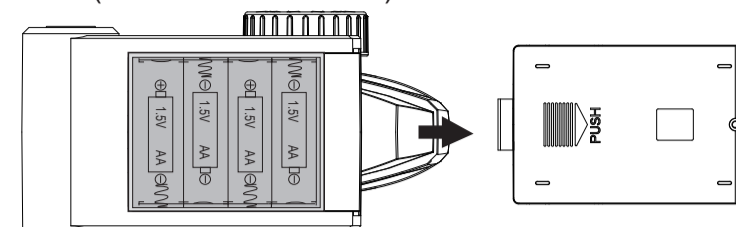


Battery Charging Instruction

Insert one side of the USB connector into the battery, and the other side into any computer USB port. Charge time is approximately 3hrs. While charging the USB LED light will be ON. This turns OFF once fully charged. For notes on BATTERY USE please see instructions cover.



Methods for Installing Batteries of Boat Controller

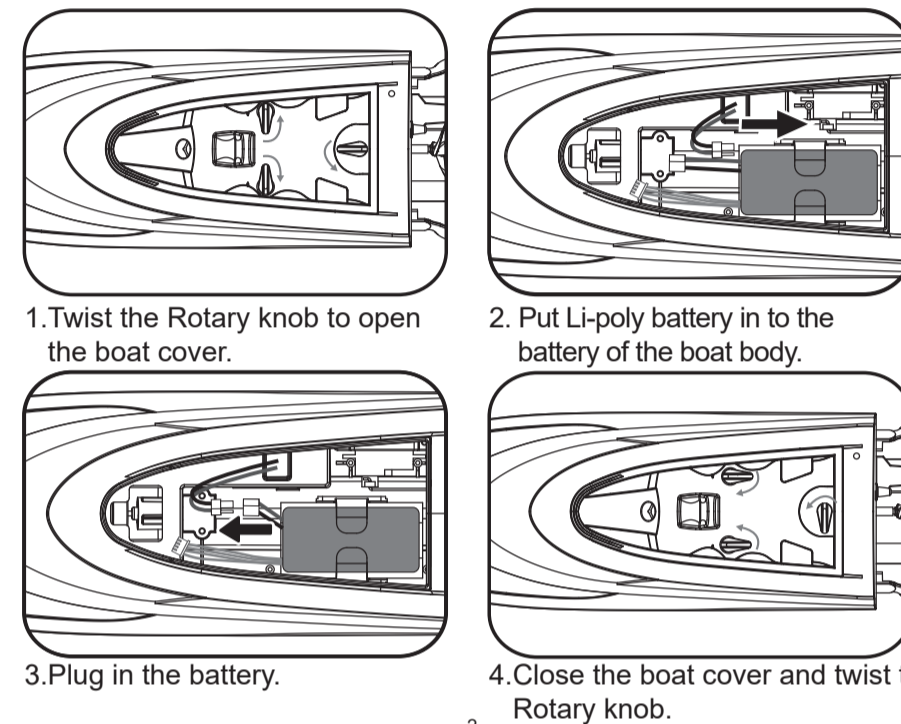


-2-

RC Boat Design Highlights:

- Unique cooling system
- Waterproof
- Anti-collision
- Hidden wires inside the cabin
- One-key rolling
- Low battery condition for remote control is alerted by a "beep...beep" sound
- Low battery condition for boat is alerted by a "beepbeep、 beepbeep" sound of remote control

Operating Preparation

Install the battery to the boat, close the cover, put the boat in the water, and then turn on the controller, the LED light will flash quickly. When the controller connects to the boat successfully, it will make a "beep" sound, and the LED light will stay on.

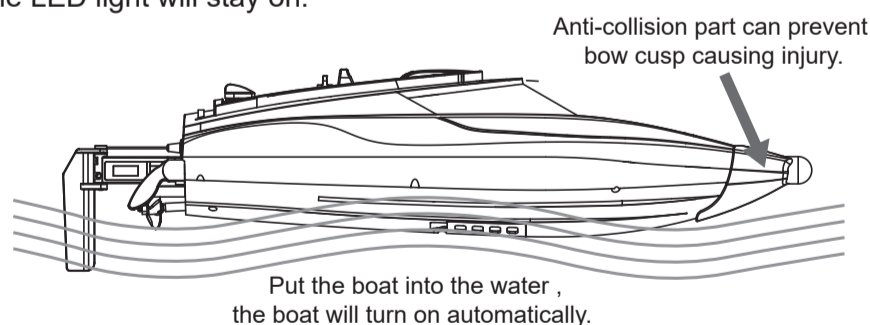


Regulation

After the controller is connected to the boat successfully, if the propeller moves or makes any sound without pushing the accelerator, press the regulating button for adjustment. If the propeller rotates to the left, press the right regulating button. If the propeller rotate to the right, press the left regulating button.


Switch High & Low Speed

The boat starts up with default high speed, press the speed button to change it, one "beep" for low speed, two "beeps" for high speed.

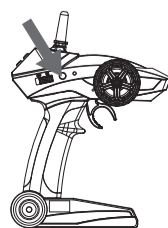


-3-

Operating Methods

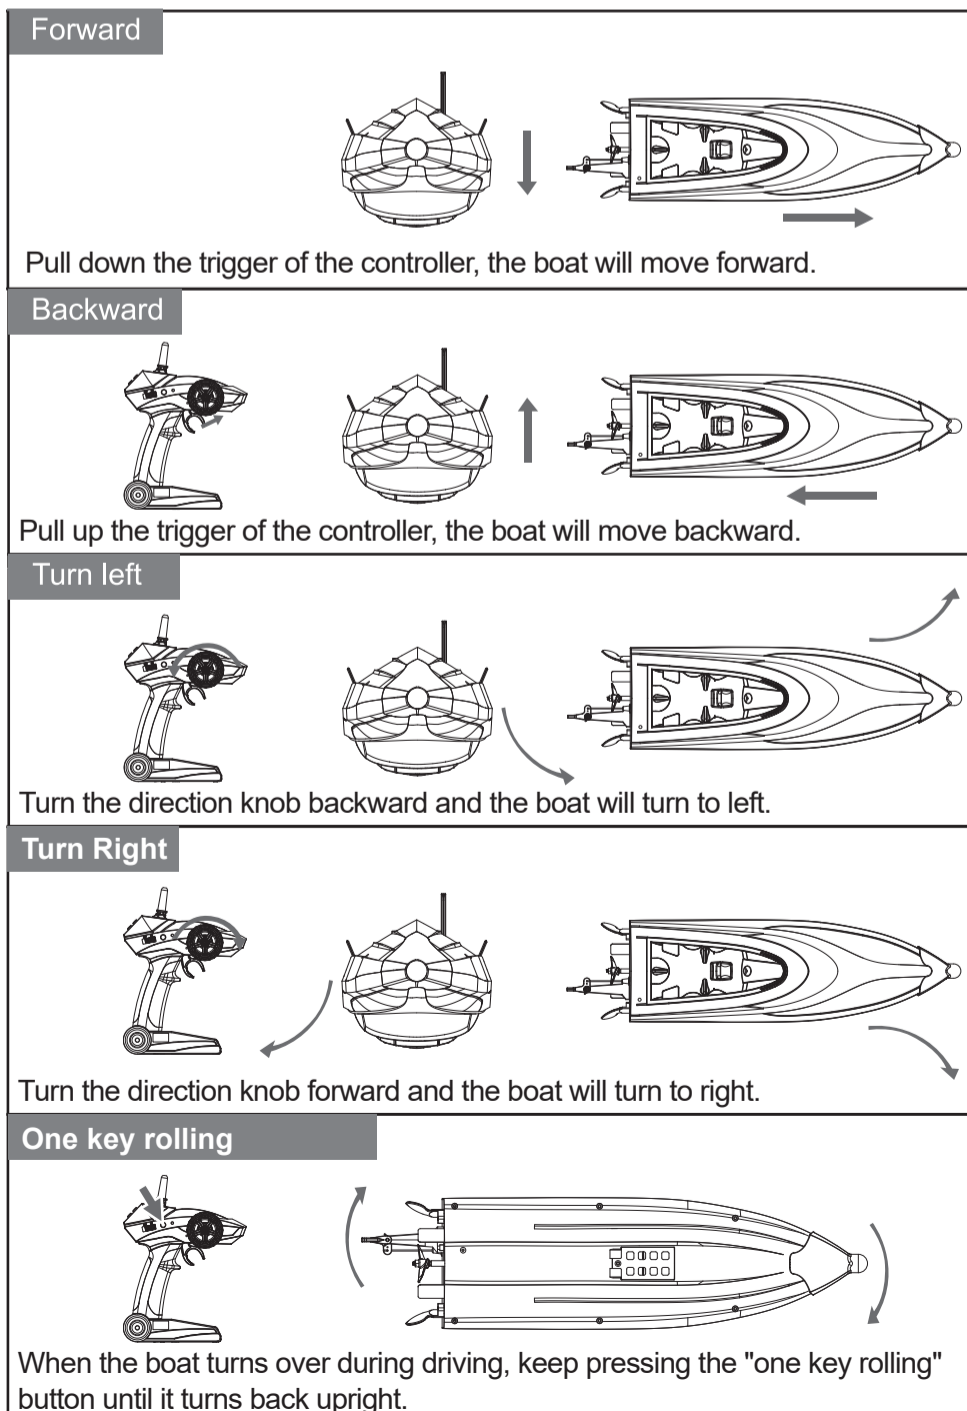

-4-

Regulating

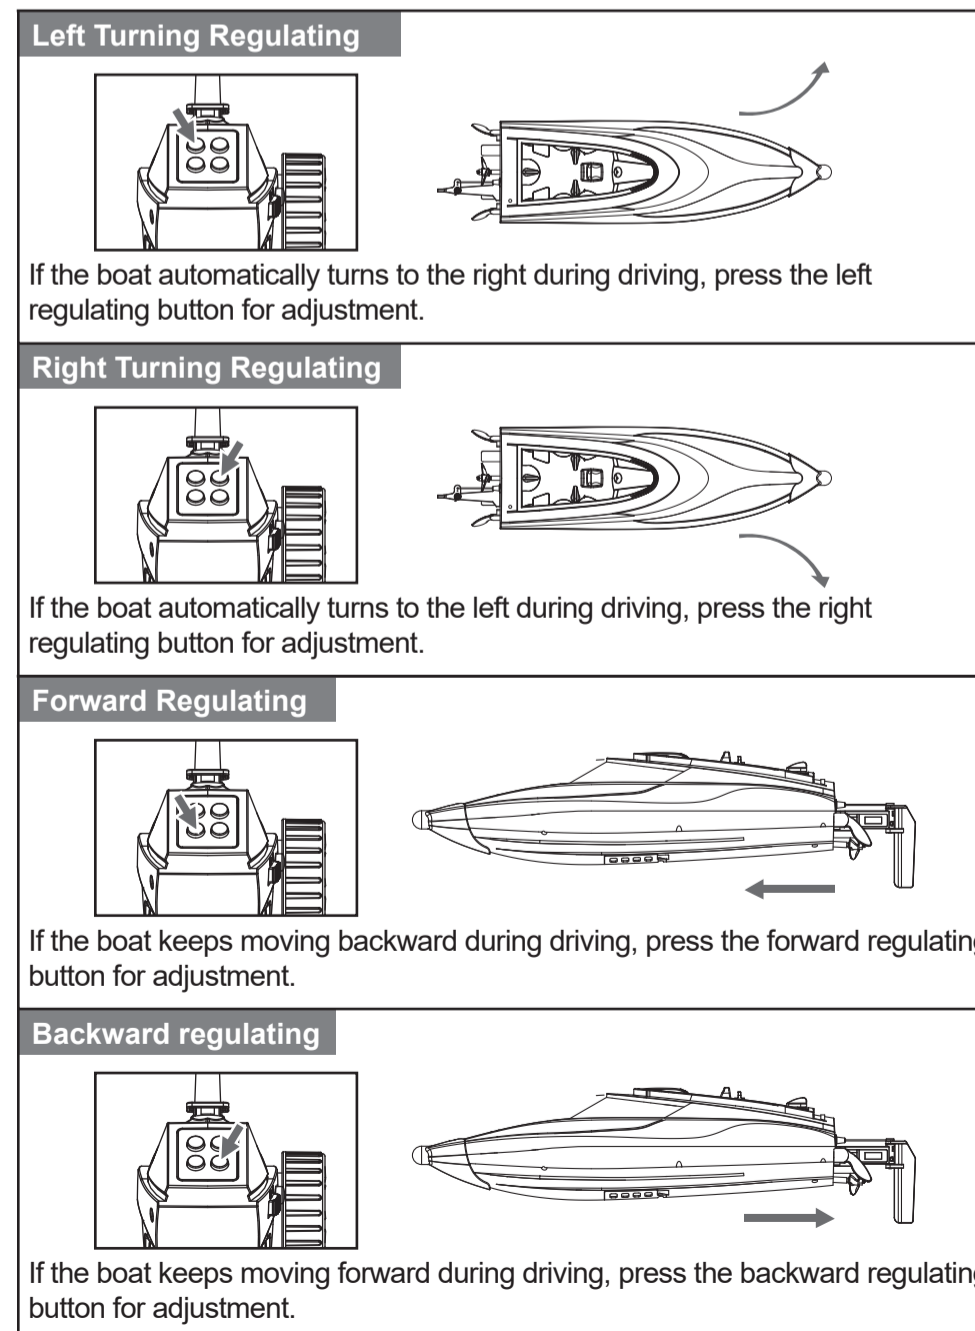

-5-